



**BK650**  
**Wired Gaming**  
**Keyboard**

## Additional Information

For support and updates, please visit: [busbistore.com/product-support](https://busbistore.com/product-support), or simply open the camera app on your mobile phone, and point the camera at the QR code below:

 


# Introduction

Thank you for choosing the Busbi BK650 wired gaming keyboard.

This guide will help you set up, customise, and maintain your mouse for optimal performance.

## Keyboard Overview:

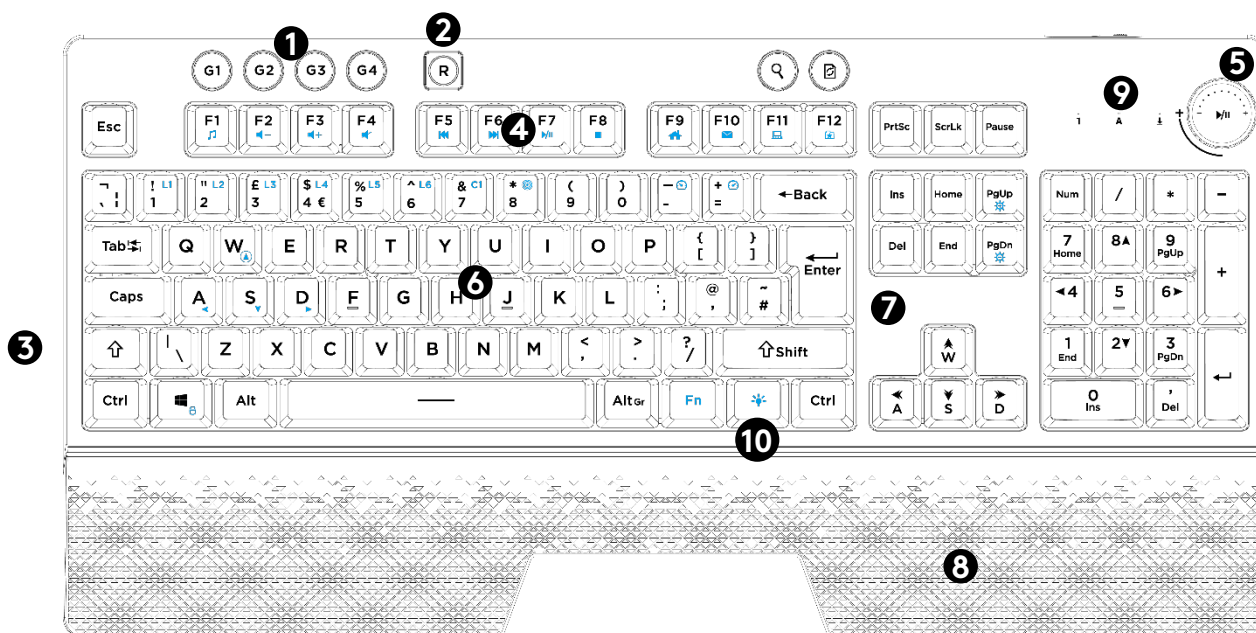

- |   |                         |    |                           |
|---|-------------------------|----|---------------------------|
| 1 | 4 x Programmable G-Keys | 6  | 26 Anti-ghosting keys     |
| 2 | Record Key              | 7  | Spill resistant           |
| 3 | Anti-Slip rubber feet   | 8  | Detachable wrist support  |
| 4 | Multi-media keys        | 9  | Caps, Num, Scroll lock    |
| 5 | Rotary volume +/-       | 10 | Toggles backlights On/Off |


## Setup Instructions
 
### Connect the Keyboard.

Plug the keyboard cable into a USB port on your computer.  
Wait for your operating system to detect the keyboard.



Once installation is complete and a confirmation message appears, your keyboard is ready to use.
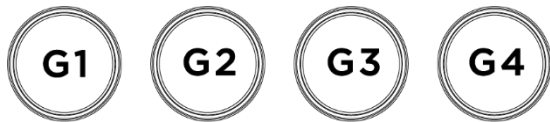
### G Key Macro Customisation




This keyboard has 4 programmable macro keys (G1~G4)  
A sequence of up to 16 key presses can be assigned to each G key.

**To assign a sequence follow the process below:**

 
1. Press  key
2. Press the key sequence/combination required.
3. Press the desired G key the sequence is to be assigned.
4. Press  key, the 3 lock LEDs will flash, confirming the sequence is now assigned to the G key and saved.

**To Clear a saved sequence:**

Press the  key followed by the G key you wish to clear.  
The sequence has now been cleared from the G key.

# Controls

## Audio Controls

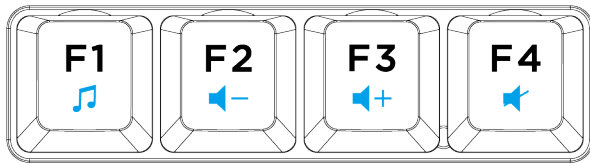


**Fn + F1** = Open the default media player

**Fn + F2** = Decrease volume

**Fn + F3** = Increase volume

**Fn + F4** = Mute speakers

## Media Controls

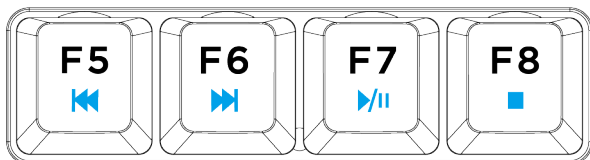 


**Fn + F5** = Previous track

**Fn + F6** = Next track volume

**Fn + F7** = Play / Pause

**Fn + F8** = Stop

## Internet Controls

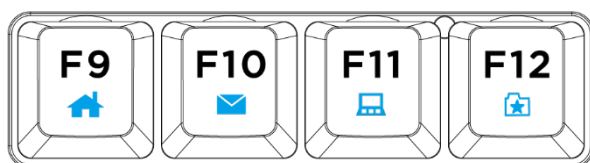 


**Fn + F9** = Open Web/Home page

**Fn + F10** = Launch default email application

**Fn + F11** = My computer


**Fn + F12** = Favourites

## RGB Controls

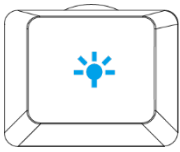 

Press to toggle backlight On/Off


## Brightness

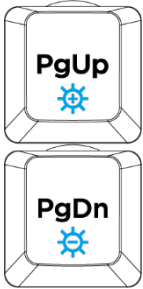 

Press Fn + PgUp to increase brightness


Press Fn + PgDn to decrease brightness

## LED Mode

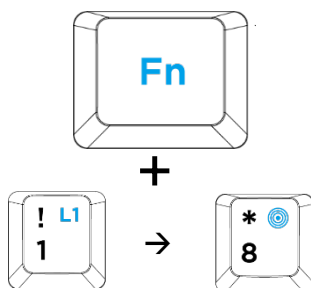 

Press Fn + any number from 1 to 8 to switch between LED modes.


## Colour transition speed

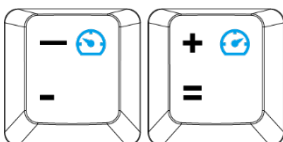 

Press Fn + **+** to increase speed of colour transition


Press Fn + **-** to decrease speed of colour transition

## Cursor Swap

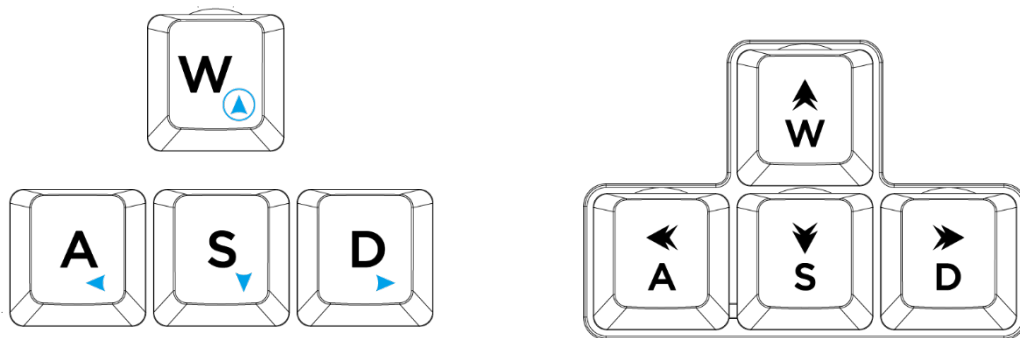 

Press Fn key and 'W' to swap the cursor keys and 'W, A, S, D' keys for game play

## Winlock®

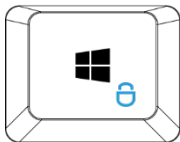 

Press Fn + Windows® key to enable or disable Windows® key (Winlock®)

## Specifications

ITEM	SPECIFICATIONS
Layout	UK
Keyboard Type	Backlit RGB
Macro	4 programmable G Keys
Interface	USB A
Key Mechanism	Membrane
Dimensions	445 * 167 * 35mm
Total Weight	830g +/- 10g
Cable Length	1.8m
Indicator Light	Caps, Num, Scroll lock
Polling rate	1000Hz
Multimedia Keys	5 Keys + Rotary
Key life	10 million +
Backlight Colours	RGB + 8 Customisable
Backlight Control	On/Off and Brightness adjustment
Anti Ghosting	26 Keys without conflict
System Requirements	Windows® XP/Vista/7/8/10 or later

## **SAFETY AND COMFORT**

Long periods of repetitive motion, improper positioning of your computer and incorrect body posture may be associated with physical discomfort and injury to nerves, tendons, and muscles.

To minimise these risks, position your keyboard and monitor directly in front of you. Keep your elbows next to your side, and your keyboard within reach without the need to stretch your arms or twist the body.

Adjust the height of your chair and table so that the keyboard and mouse are at or below elbow height.

Keep your feet well supported, posture straight and your shoulders relaxed.

Use a wrist rest to support your wrist while working or gaming.

Be sure to take regular breaks away from your desk and perform exercise, stretching your arms, shoulders, neck and legs to loosen muscles.

## **Statement of Compliance**

Busbi, declares this Gaming Keyboard, model: BK650 is in compliance with UKCA requirements and the essential requirements and other relevant provisions of Directive 2014/30/EU and 2015/863/EU



## **Disclaimer**

Product design, specifications, and text may change without prior notice. If you have any questions or require further assistance, please refer to the Busbi website.

Windows and the Windows logo are trademarks of the Microsoft Group of companies.

## **Limitation of Liability:**

Busbi shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product.

**BUSBI WILL BEAR NO LIABILITY FOR LOSS OF OR RECOVERY OF DATA, SOFTWARE, PROGRAMS, OR LOSS OF USE OF PRODUCT(S).**



## Disposal and Recycling Information



Dispose of packaging materials at a public waste disposal site.

This product should not be treated as household waste.

Please take it to an appropriate collection point for recycling electrical and electronic equipment.

For more information, contact your local authorities or waste collection centre.